

THE THERMA-WHELP By Dura-Whelp ***PUPPY WARMING SYSTEM***

INSTRUCTIONS (Save these instructions)

1. Slide flat base of Stand completely under whelping box edge. (See the diagram on the right.)
2. Loosen long section of Stand by turning knob (counter clockwise). Place hanging heat Fixture on Stand hook and adjust to desired height (in a 72-degree F. room, Emitter should be about 30 inches above Cradle). Tighten knob to secure. (clockwise)
3. Repeat above step with short section of Stand arm to achieve desired position.
4. Screw heat Emitter in heat Fixture and fully insert plug.
5. Place puppy warming Cradle under heat Emitter 3 inches from whelping Box walls.
6. Monitor temperature under heat Emitter. Repeat steps 2 and 3 for desired temperature (a constant 85 to 95 degrees F. before puppies are on Cradle). Green indicates correct temperature, when Tan subtract 2 degrees, and when Blue add 2.
7. Pull power cord back and secure clips along length of Stand arm.

208-747-3605 Fax 208-747-3604 ~ PO Box 8, Clifton, ID 83228

CAUTION:

Use only Therma-Whelp brand components.

DO NOT use free standing! Lamp Stand must be counter balanced with the weight of your whelping Box.

DO NOT splice, repair or modify.

DO NOT use in wet conditions. Use indoors only.

Keep children and pets away from heat Fixture, Stand, and cord.

Fully insert plug. Unplug when not in use. Fully extend cord before using.

Keep heat Emitter away from curtains, plastic, or other flammable objects.

DO NOT use damaged components - inspect periodically. DO NOT exceed electrical rating.

