


Corner Braces Instructions

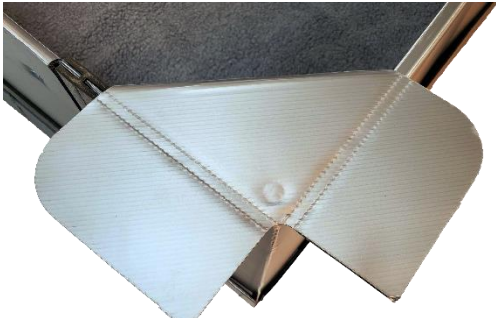

1. Wipe off the whelping box inside and outside where the corner braces will adhere with rubbing alcohol. Allow to dry completely. Then bend the smaller flaps of the corner brace up and remove the protective film from the adhesive side of the Velcro.



3. While holding the smaller flaps away from the whelping box wall, line up the corner brace with the corner of the whelping box. Once aligned, allow the small flaps to come in contact with the wall. Press firmly from both the inside and outside of the box at the same time to stick the Velcro to the wall.



4. Remove the protective film from the adhesive of the Velcro on one of the large sides. Fold the side down and press firmly from both sides of the wall to secure the Velcro into place. Repeat this step with the other large side.

5. Your corner brace is installed. Repeat this process with the other four corners of your whelping box.

